


How to enable Intel Virtualization Technology on QNAP Turbo NAS


Step1.

Connecting the monitor and external USB keyboard with QNAP Turbo NAS.

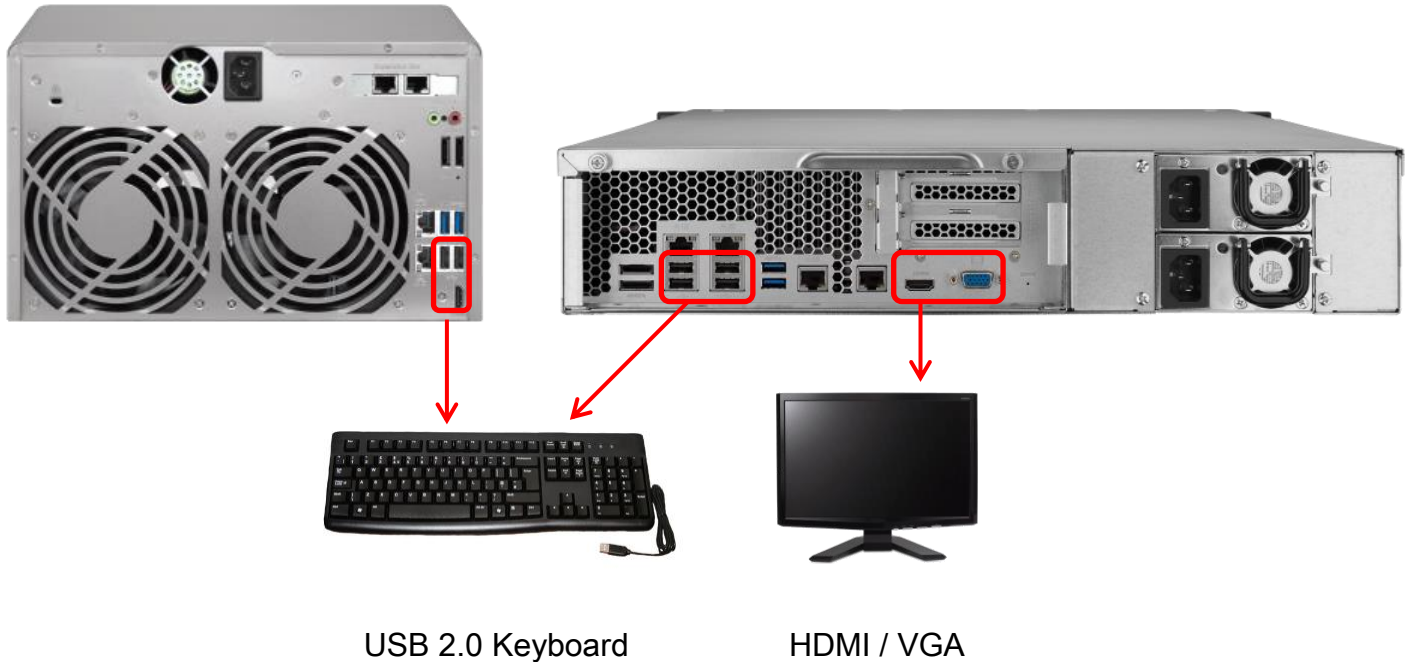



Step2.

Powering on QNAP Turbo NAS and repeat pressing the "F2" on the keyboard until the "BIOS screen" shown on the monitor. And then go to "**Advanced**" => "**CPU Configuration**".

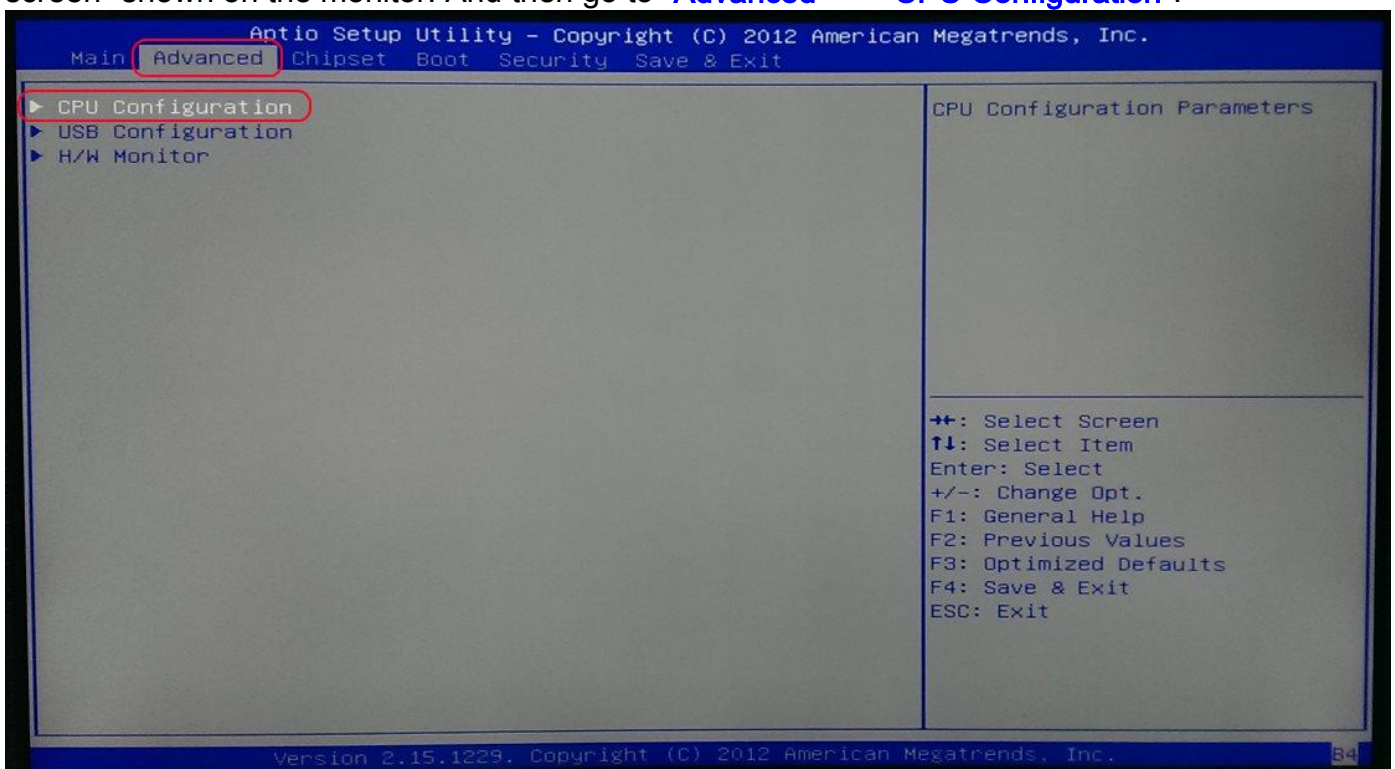

Step3.

Next, go to "Intel Virtualization Technology", and then please select "Enable".

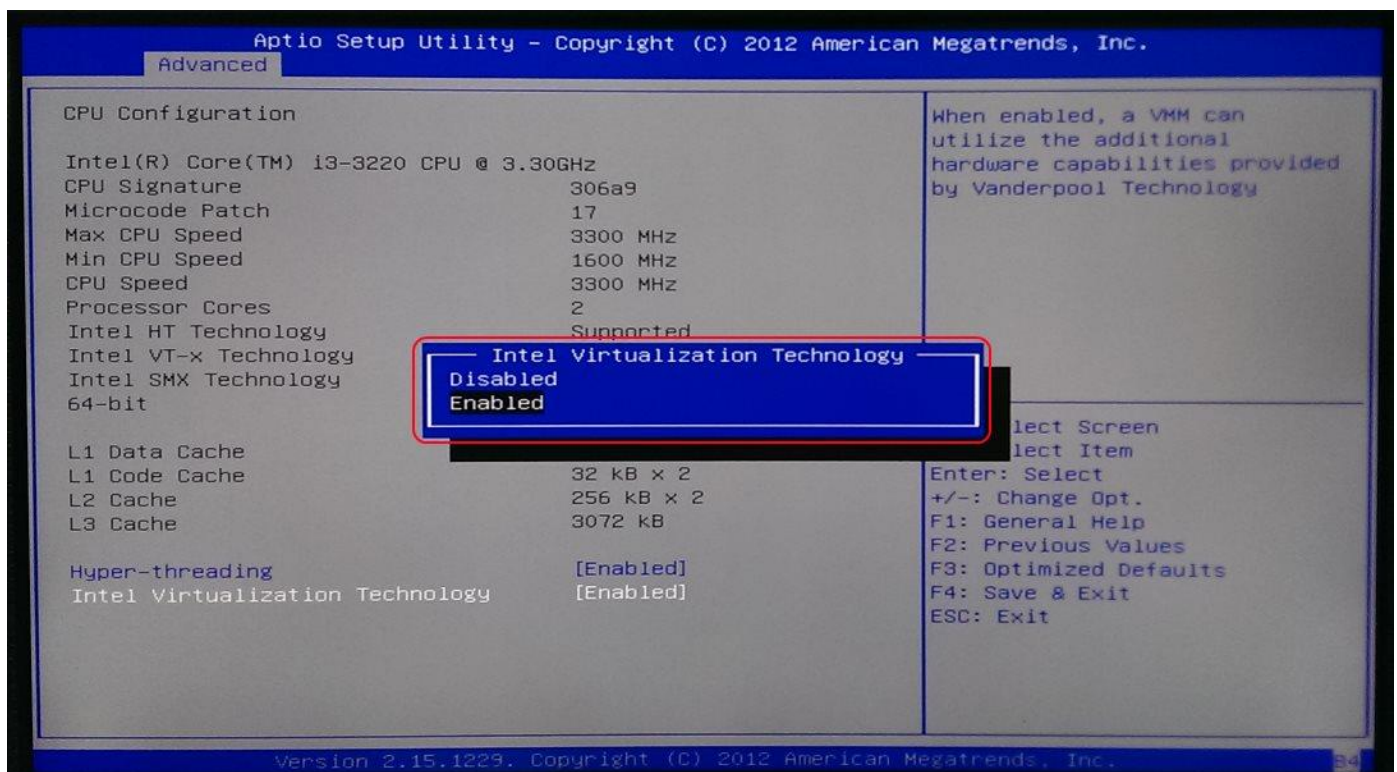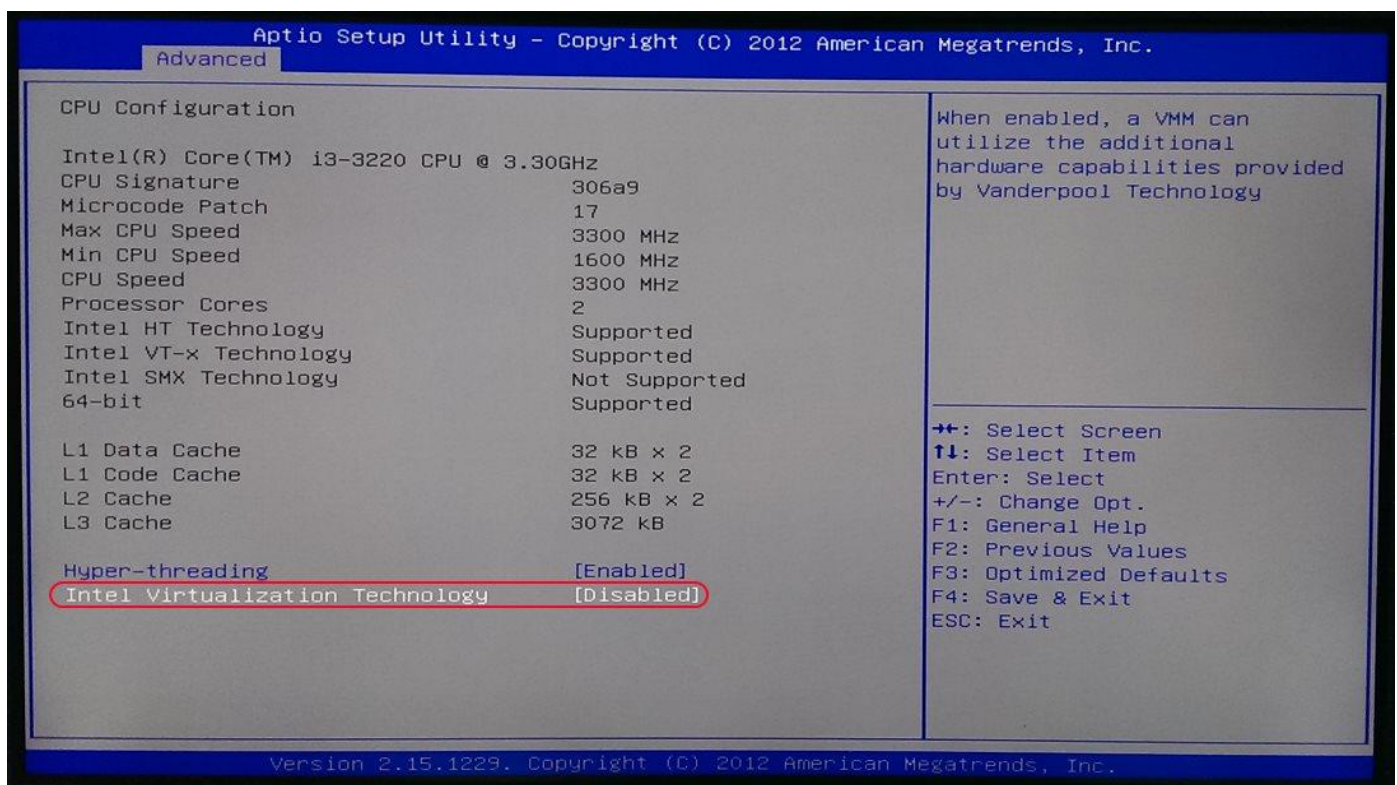

Step4.

And then, please select "**Sava Changes and Reset**" and enter to save your configuration and exit BIOS.

